




Highway66 & The Suite Spot Lane Panels

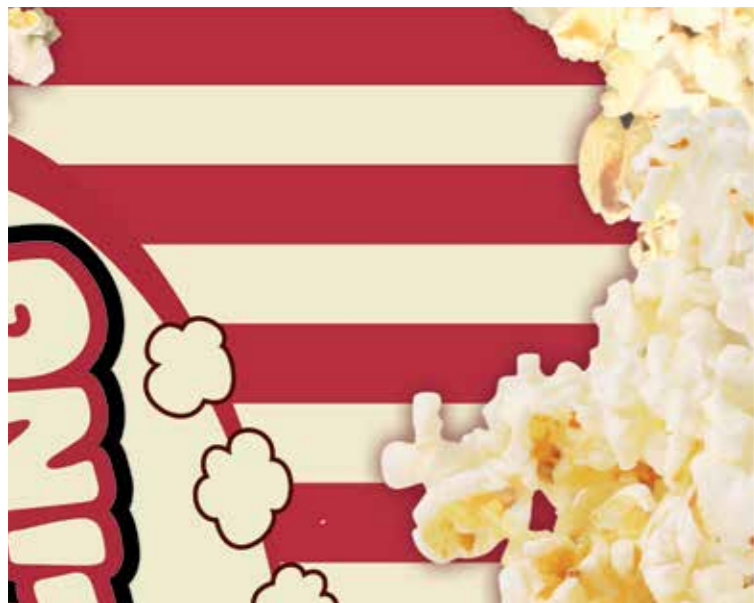




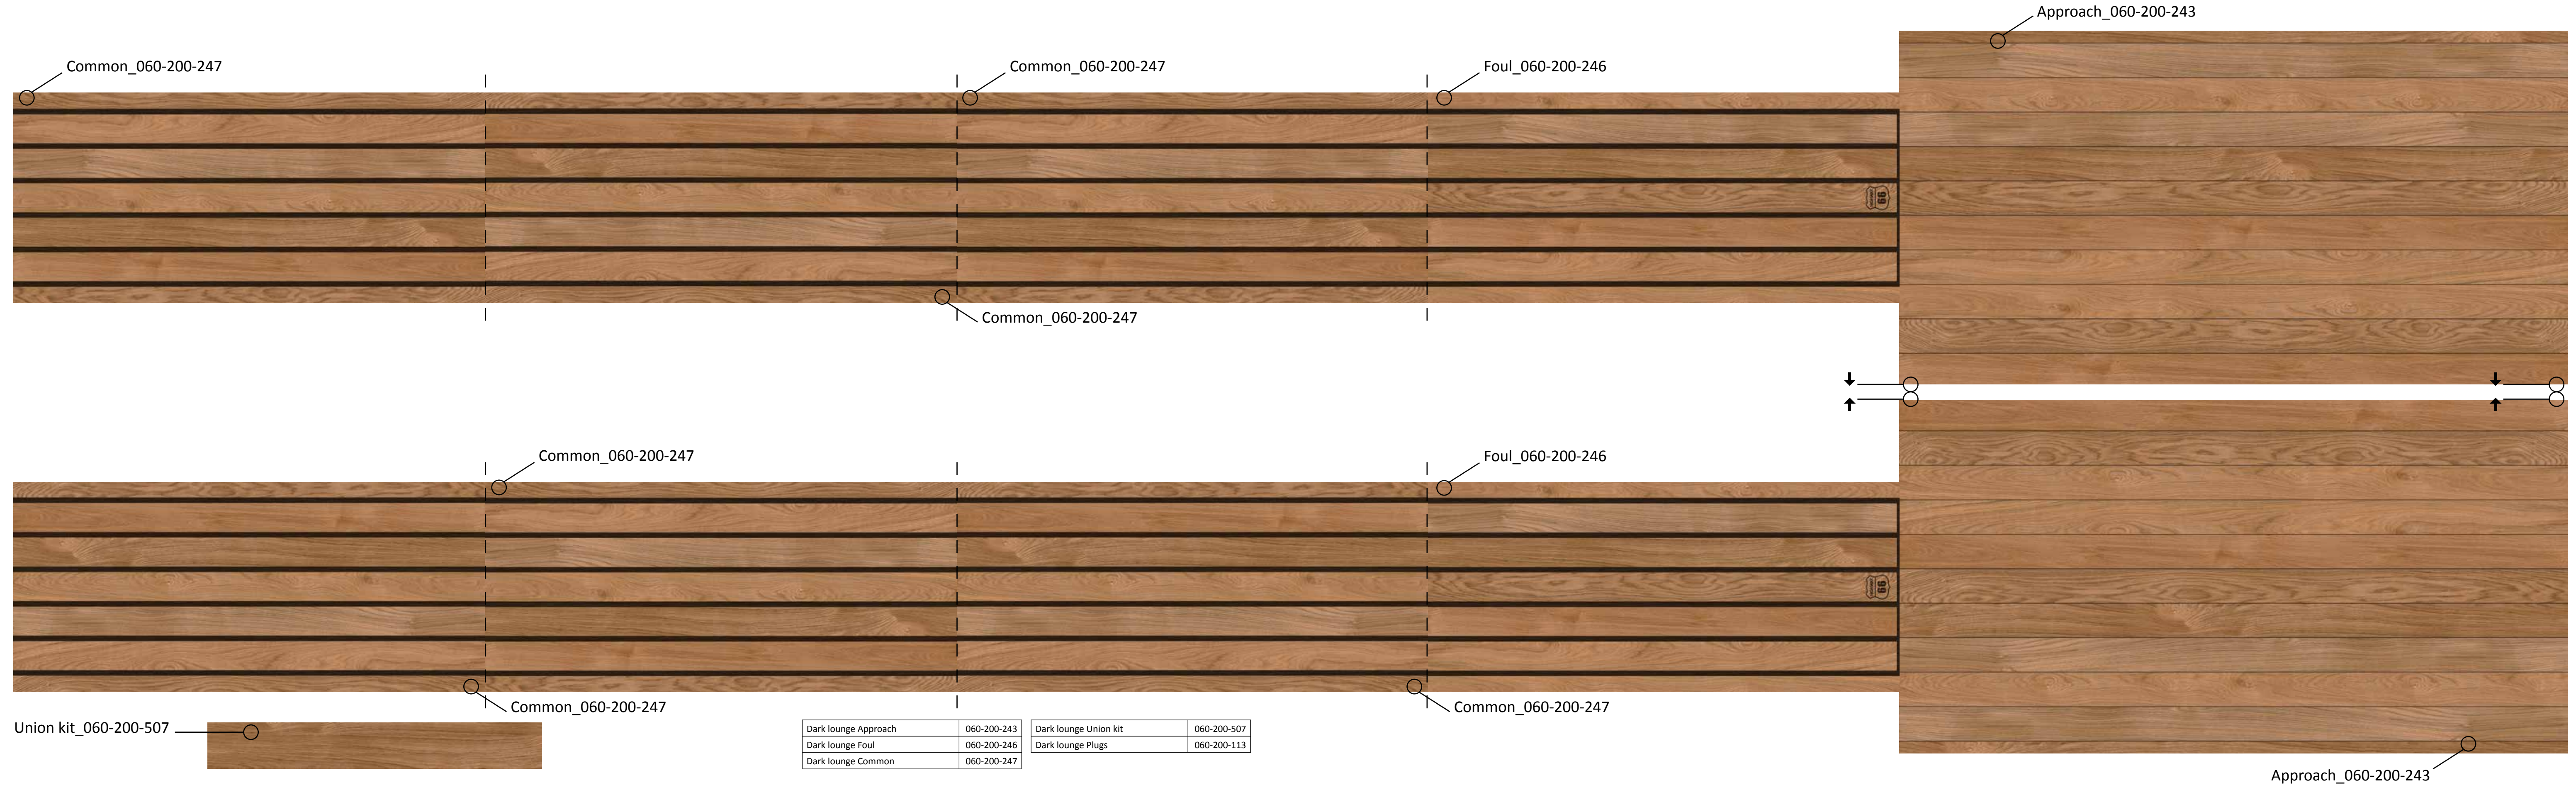

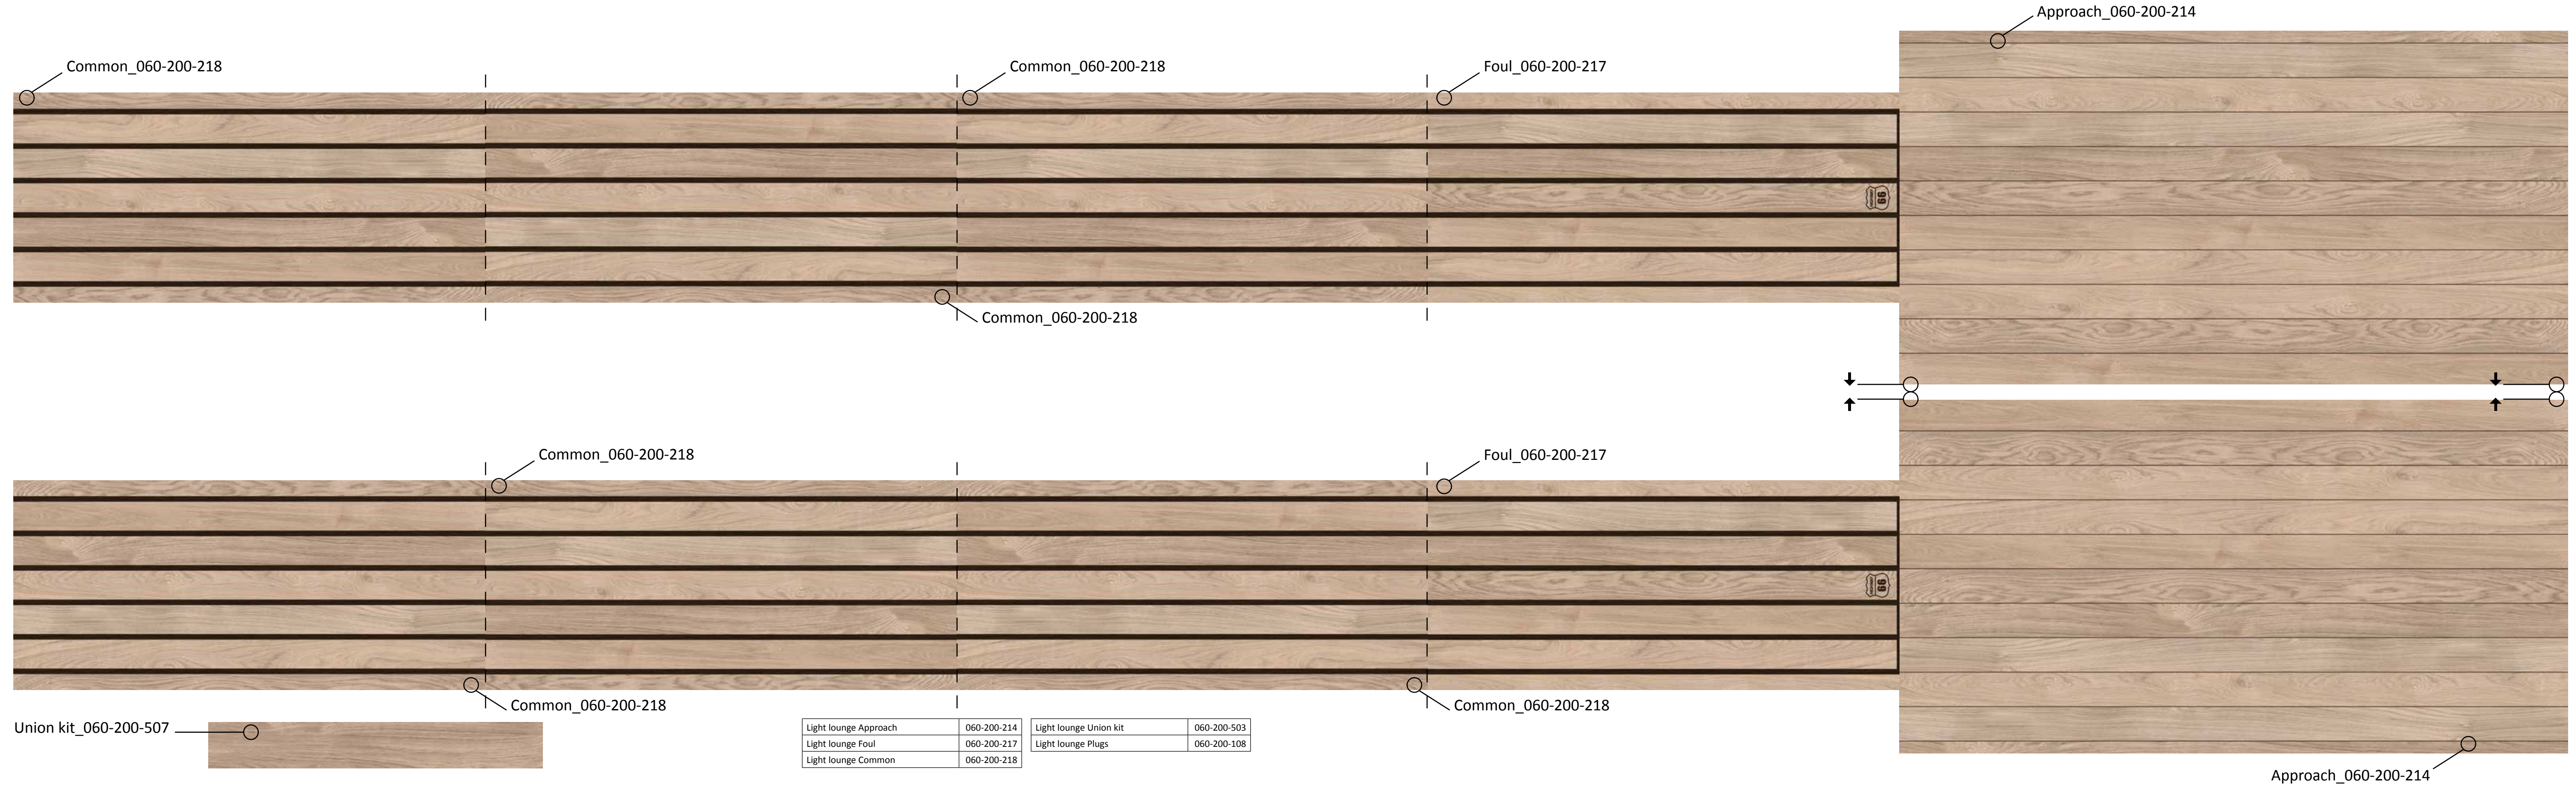

Light lounge Approach	060-200-214	Light lounge Union kit	060-200-503
Light lounge Foul	060-200-217	Light lounge Plugs	060-200-108
Light lounge Common	060-200-218		




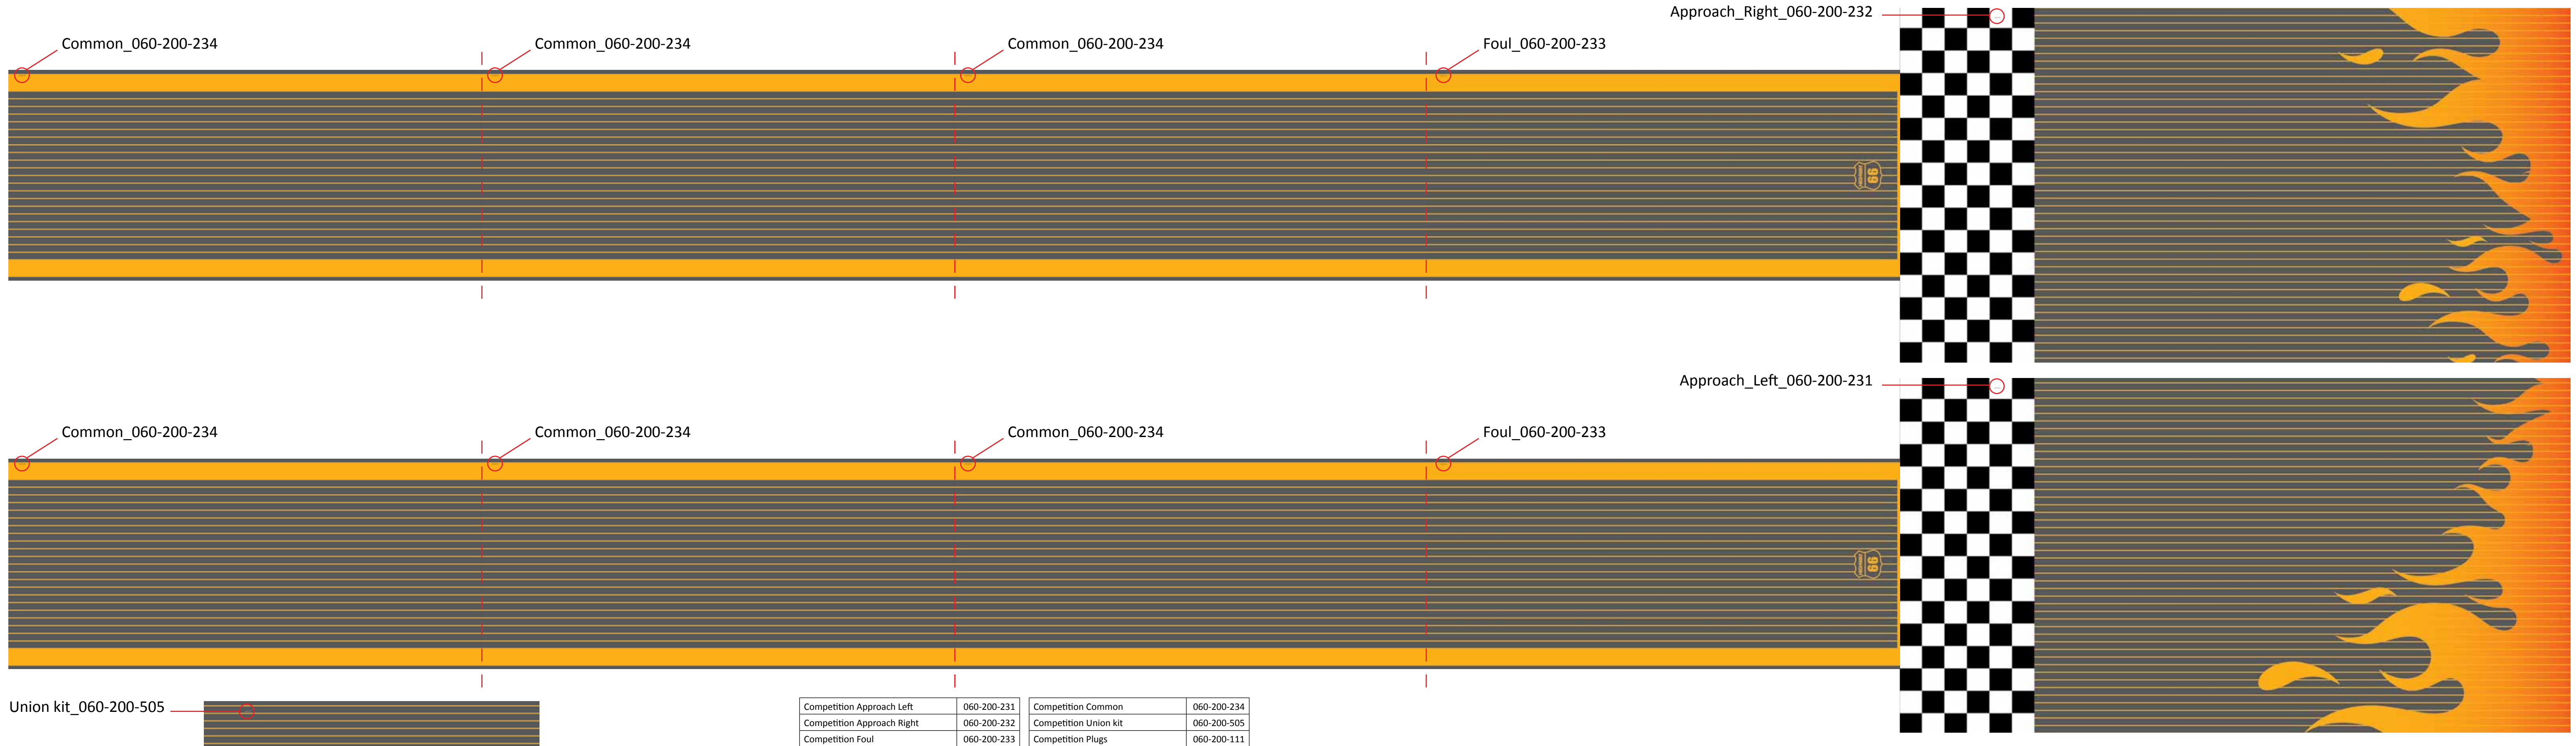






Monster Approach Left	060-200-239	Monster Common	060-200-242
Monster Approach Right	060-200-240	Monster Union kit	060-200-506
Monster Foul	060-200-241	Monster Plugs	060-200-112

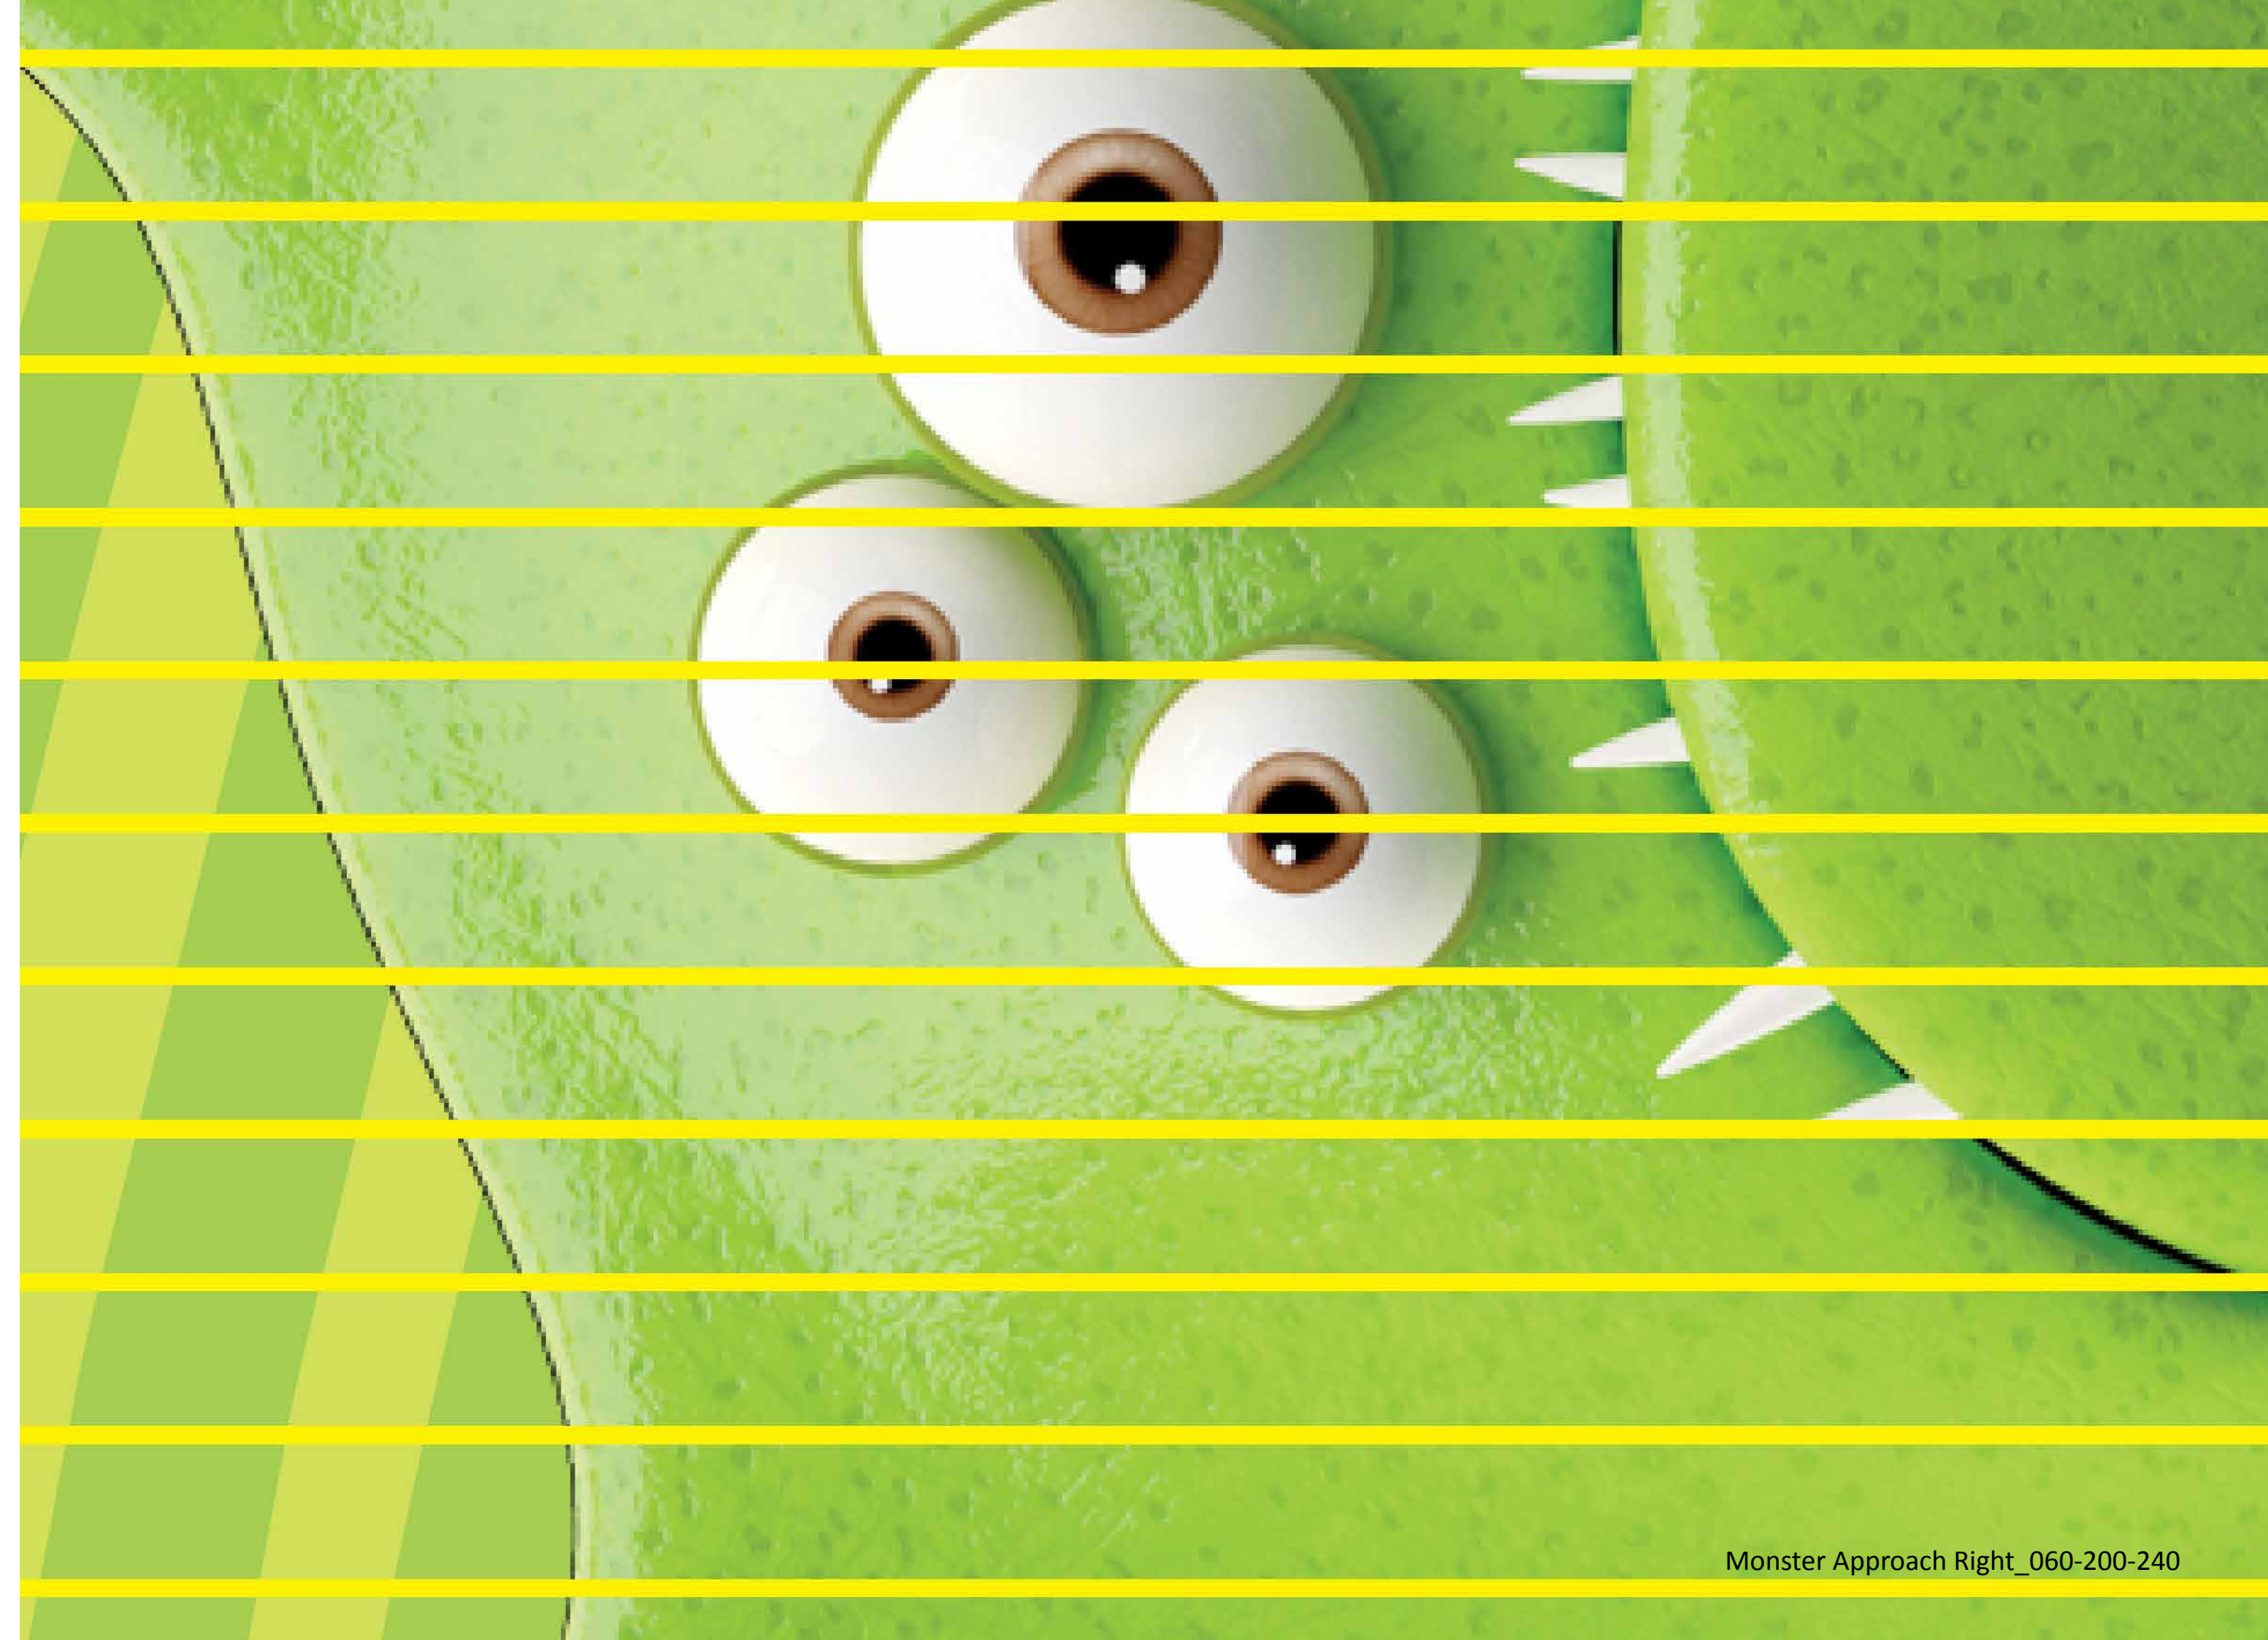





Far West Approach Left	060-200-223	Far West Common	060-200-226
Far West Approach Right	060-200-224	Far West Union kit	060-200-504
Far West Foul	060-200-224	Far West Plugs	060-200-110



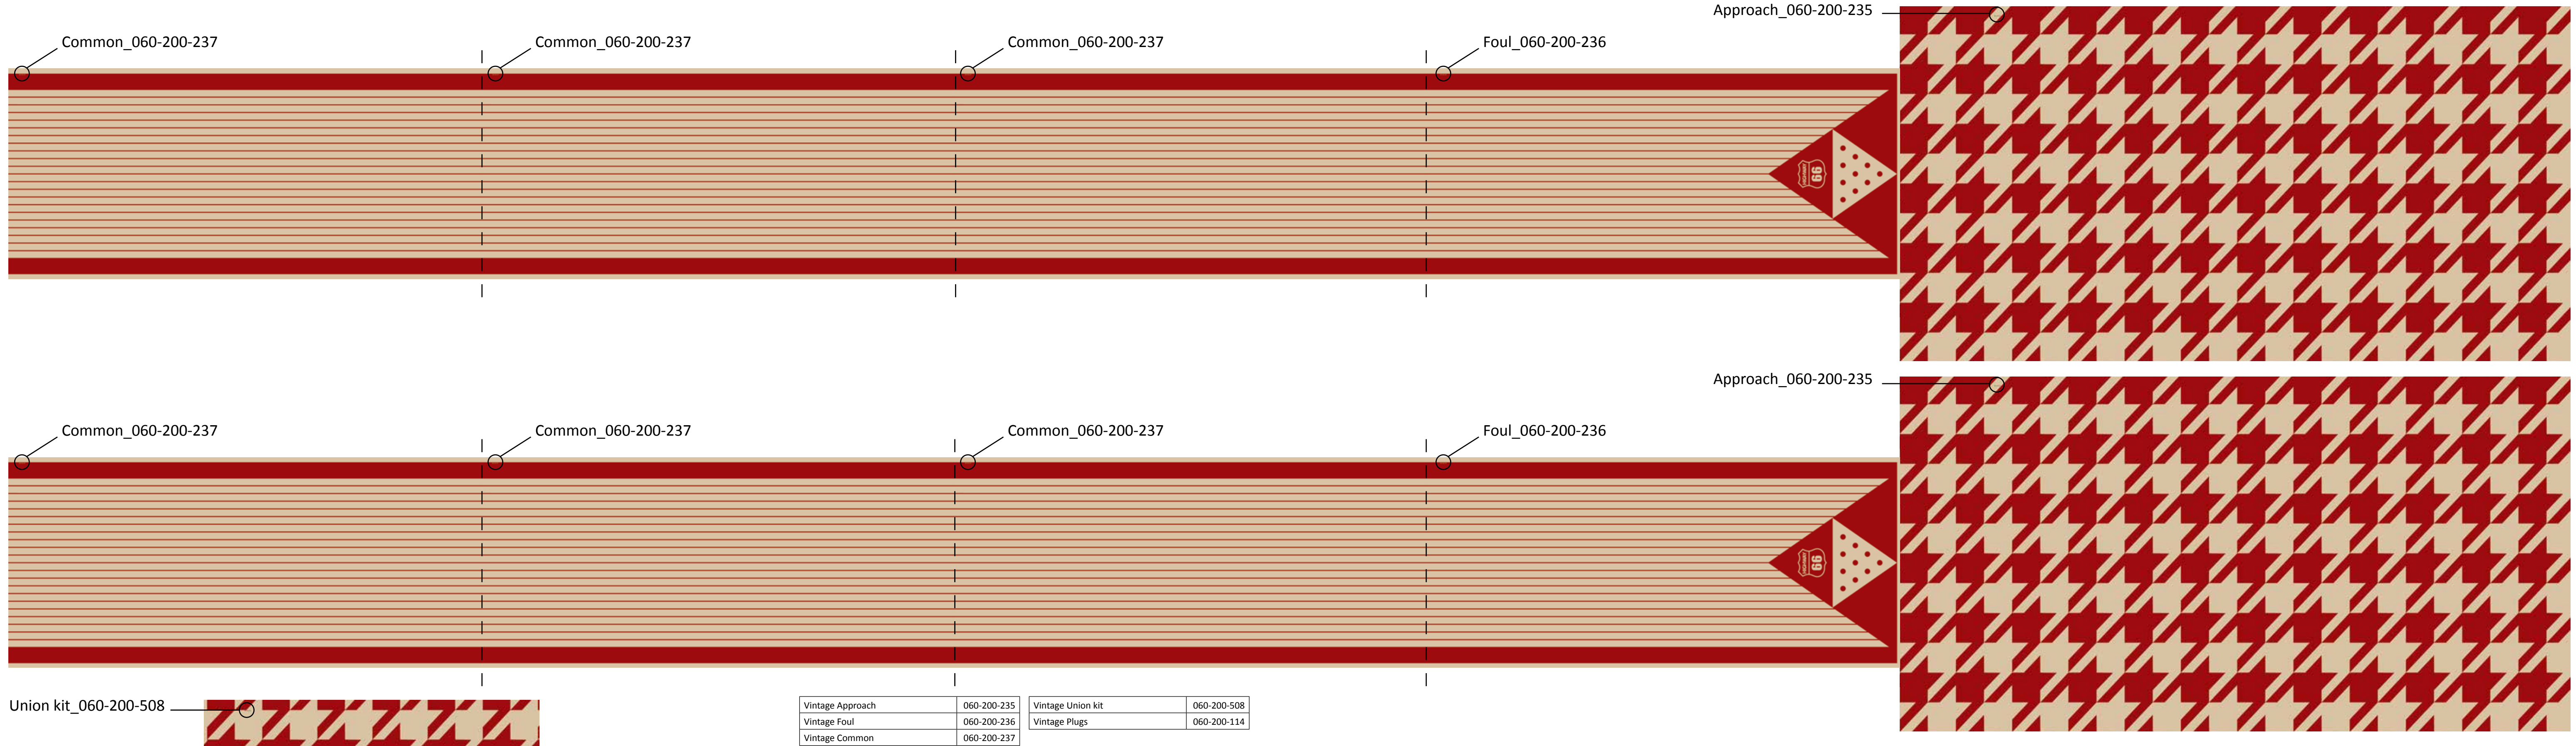


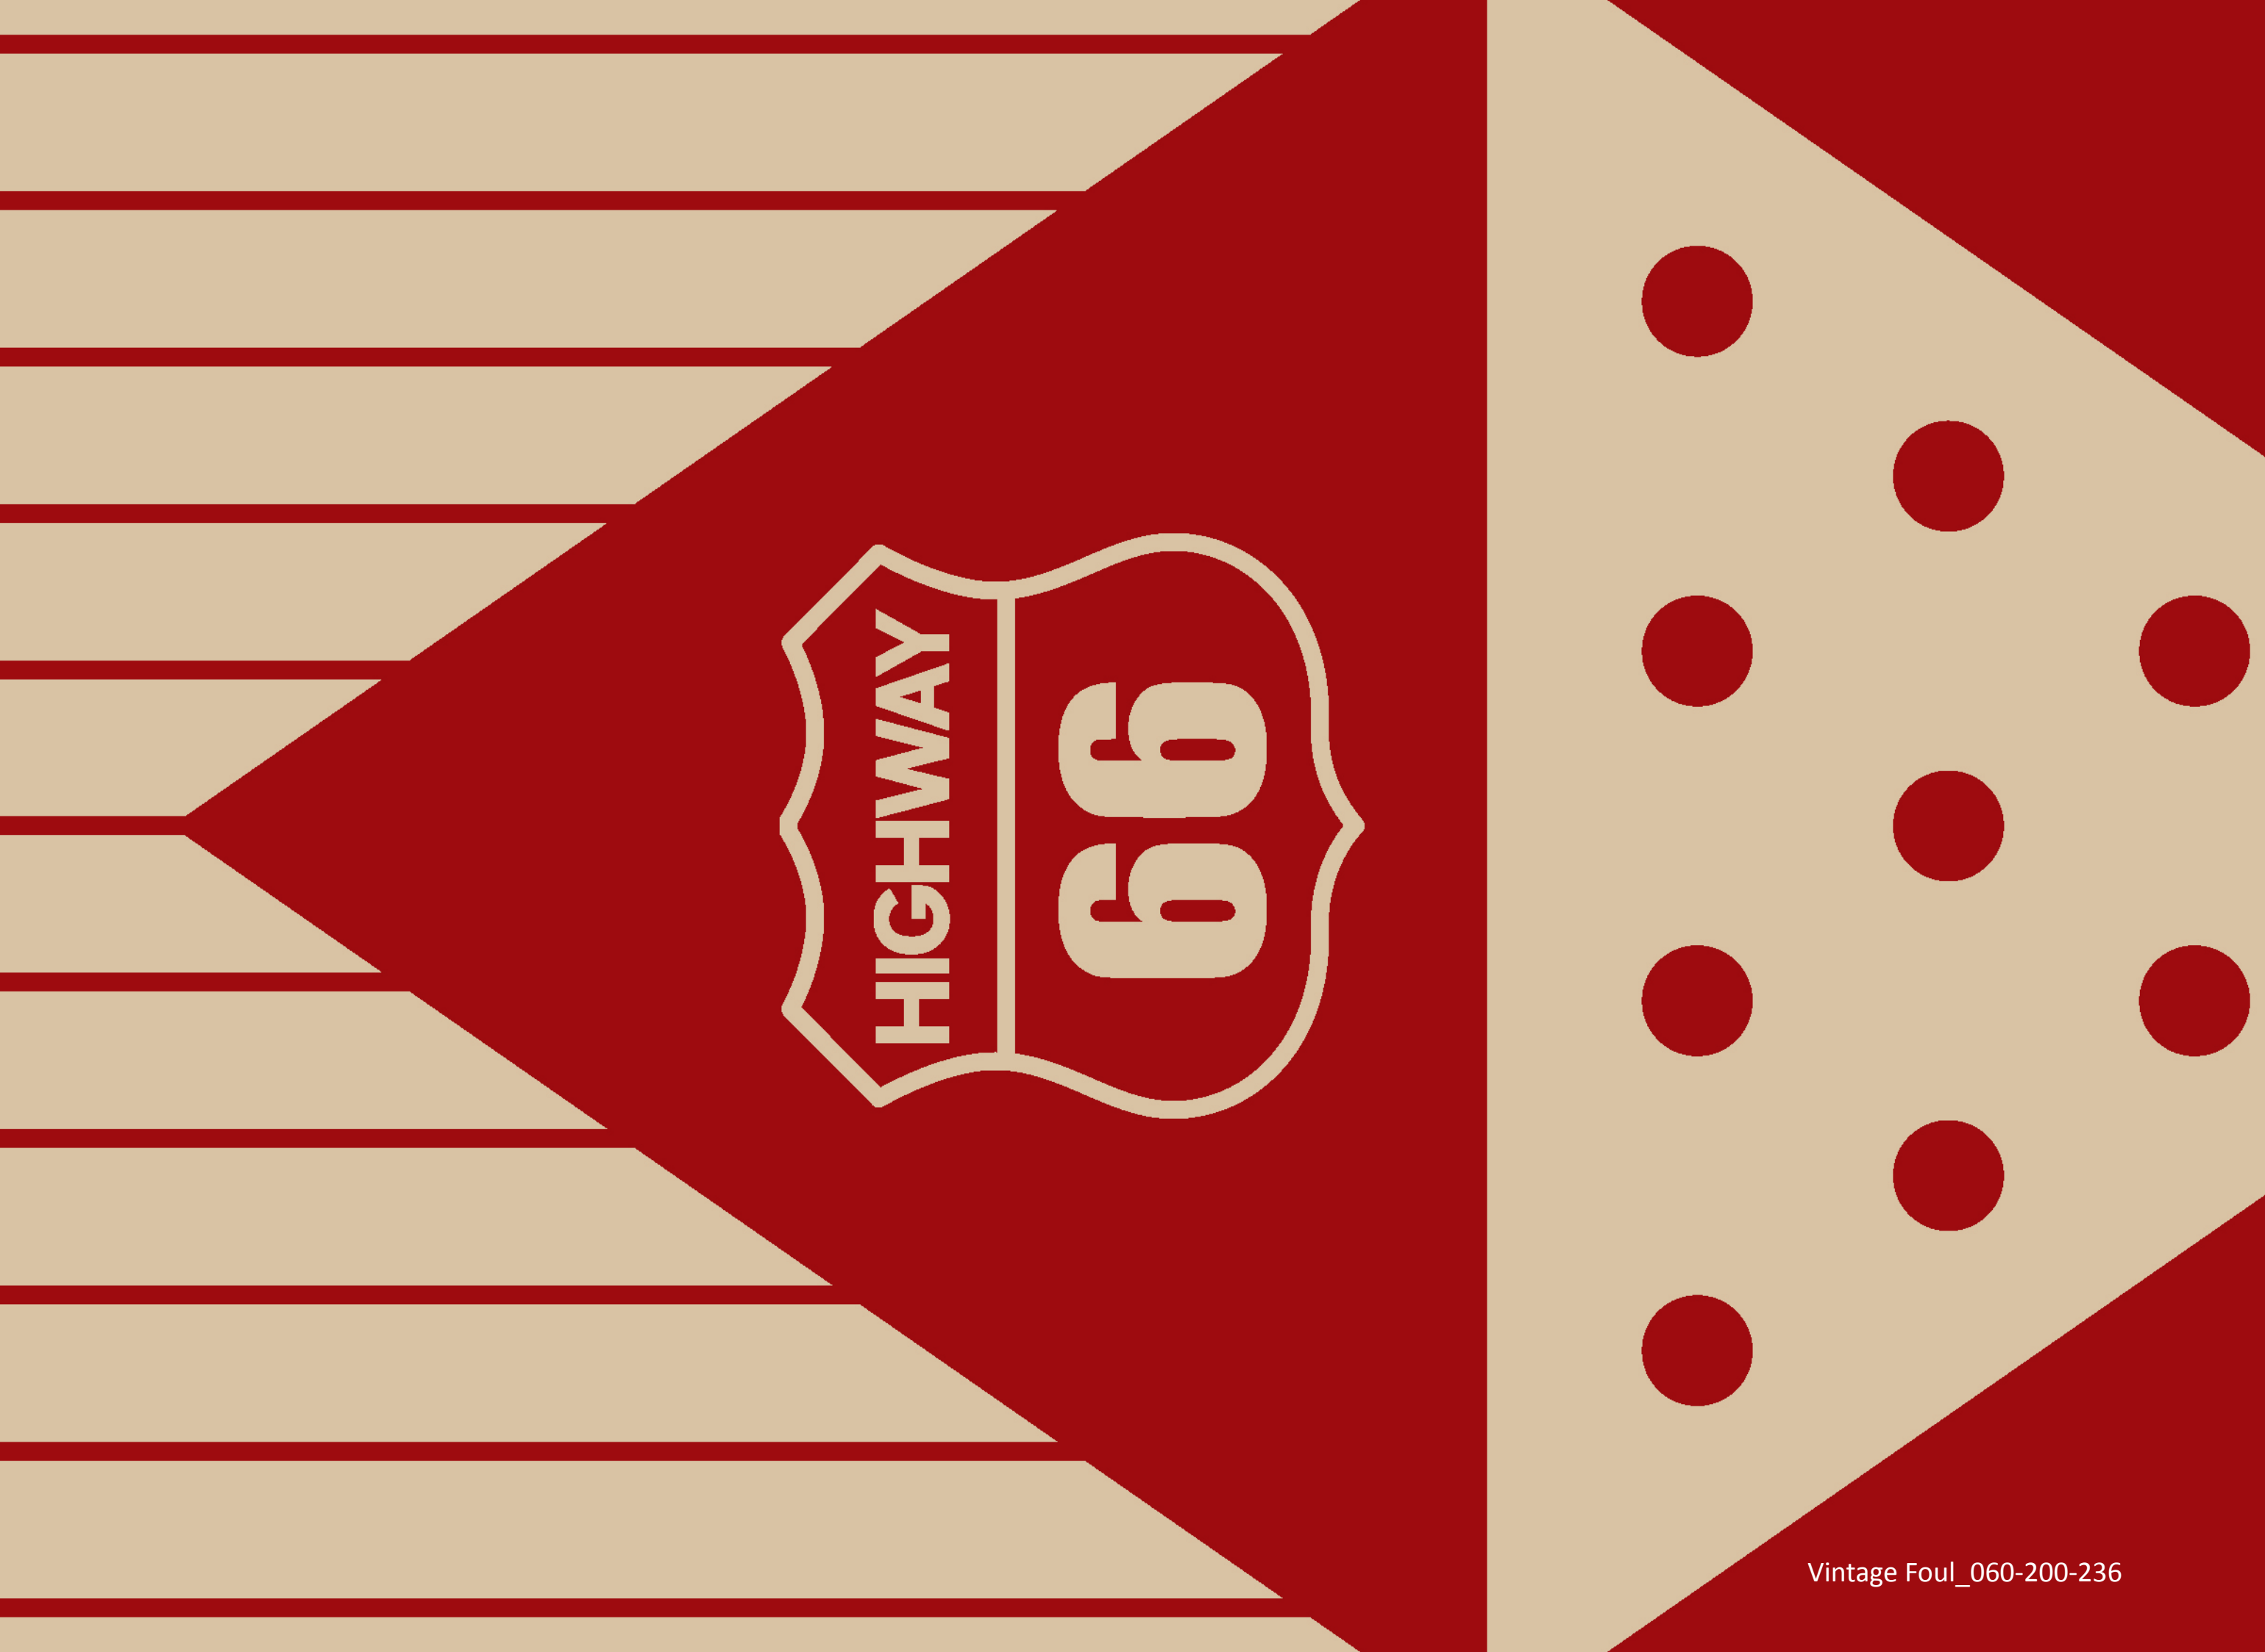


Vintage Foul_060-200-236

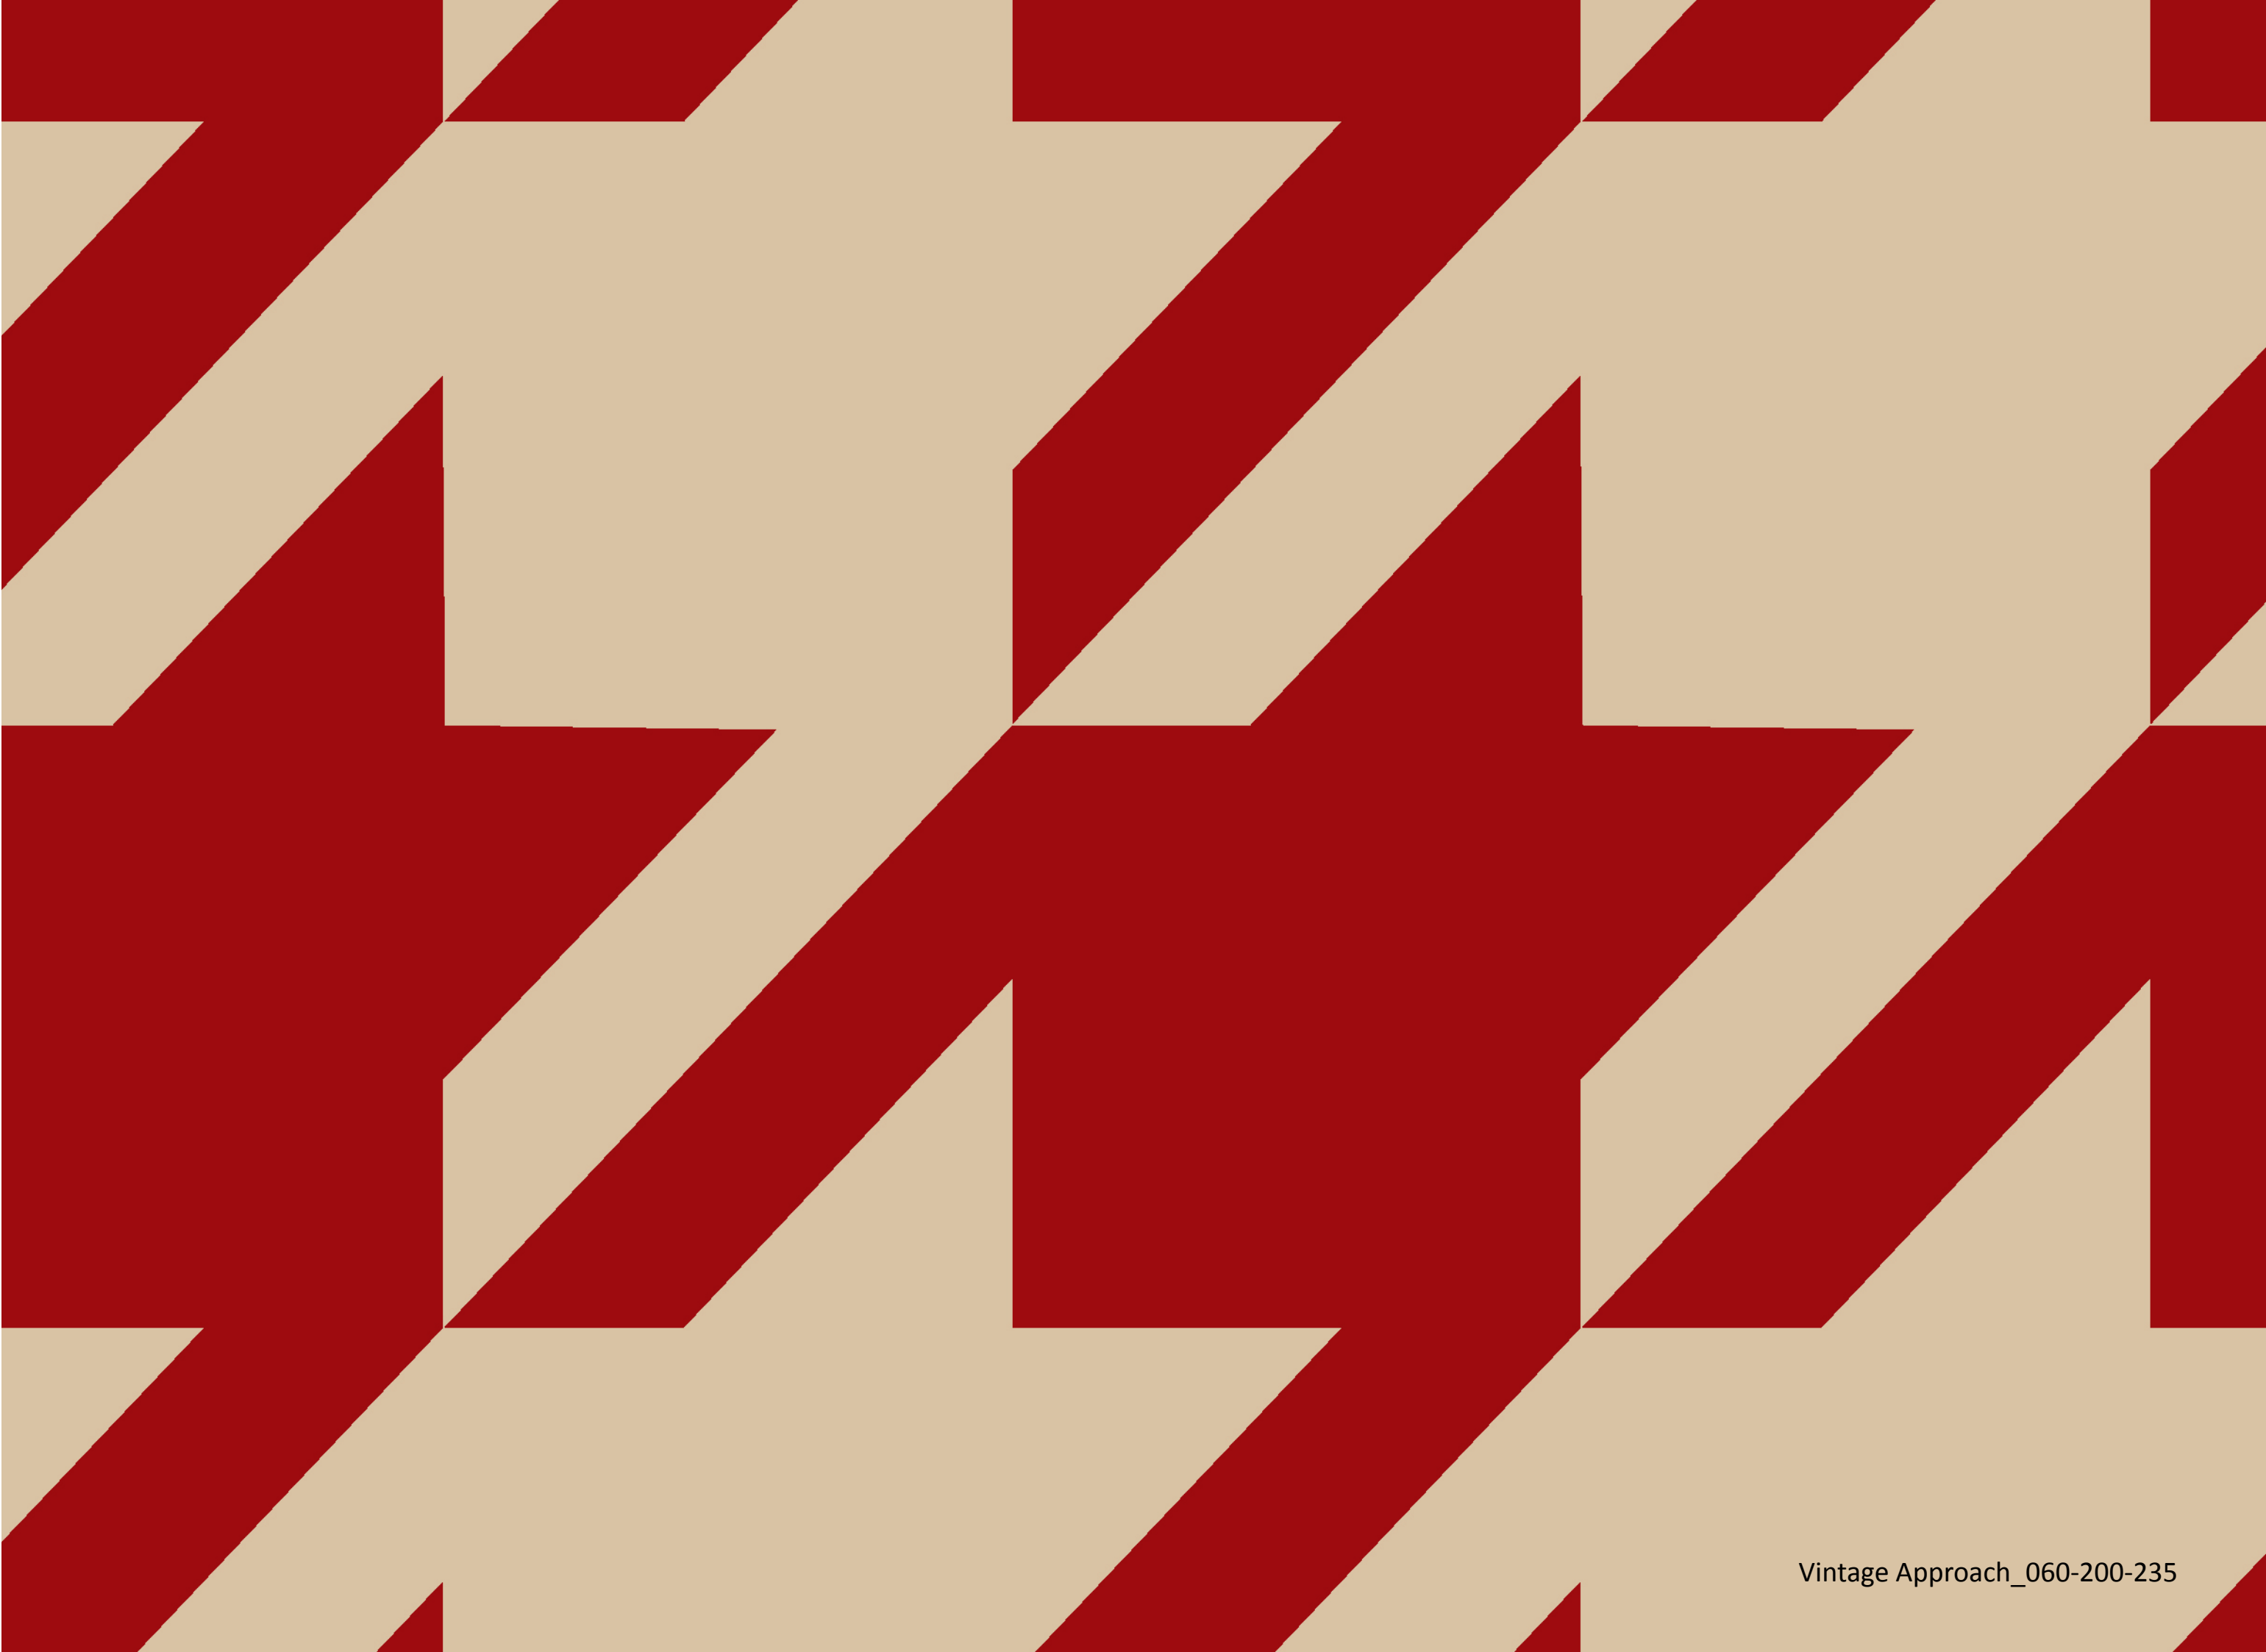

Vintage Approach_060-200-235

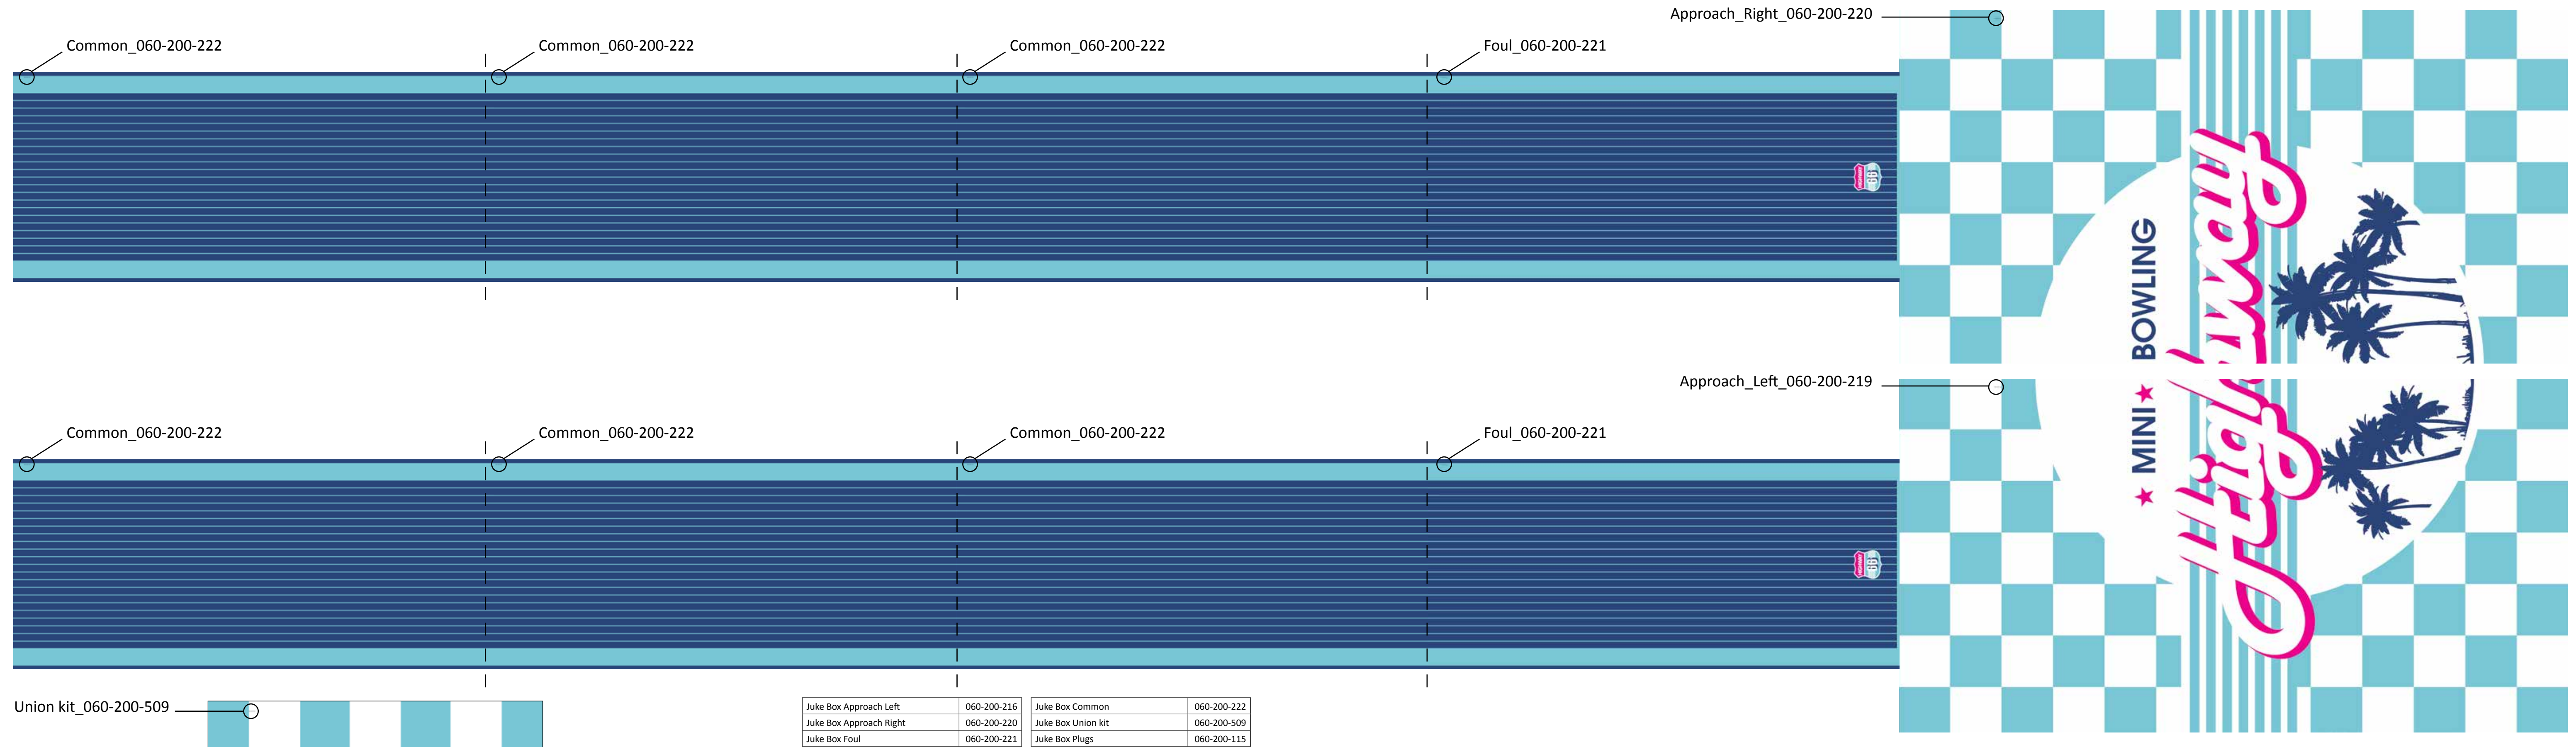



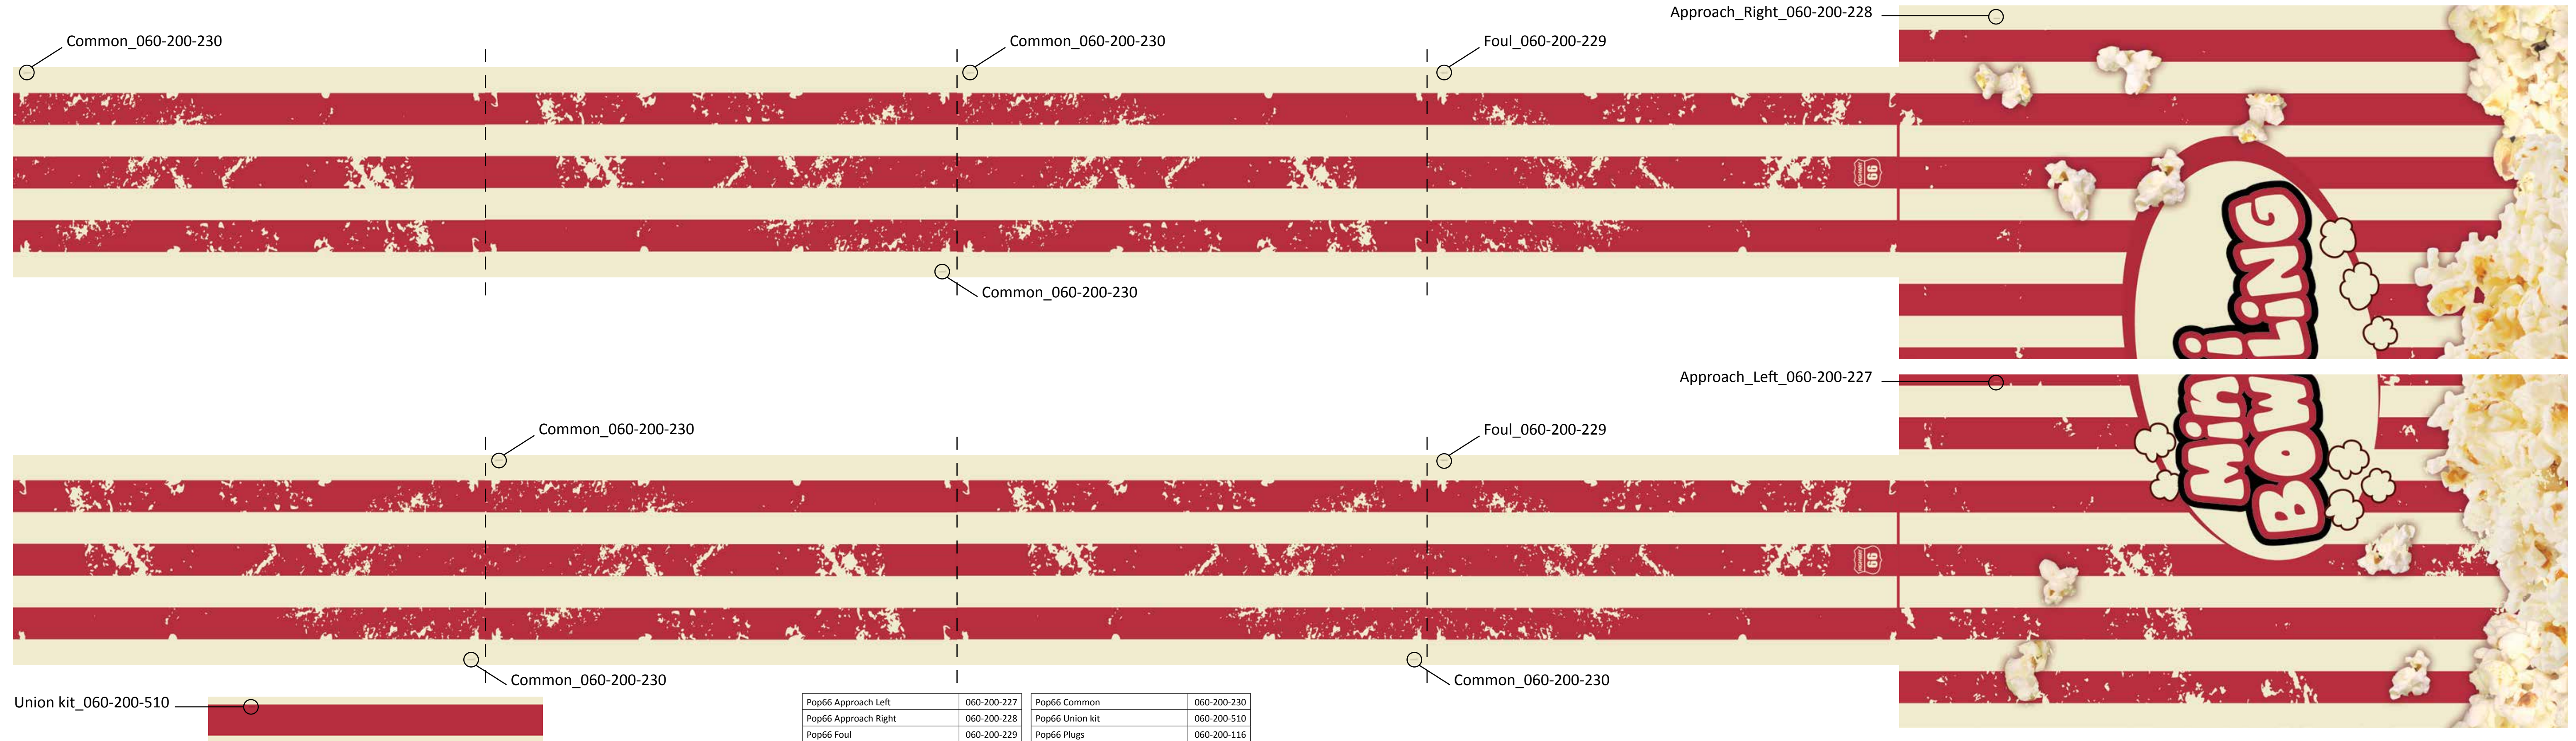

Union kit_060-200-510

Pop66 Approach Left	060-200-227	Pop66 Common	060-200-230
Pop66 Approach Right	060-200-228	Pop66 Union kit	060-200-510
Pop66 Foul	060-200-229	Pop66 Plugs	060-200-116





WORLDWIDE HEADQUARTERS

8100 AMF Drive - Mechanicsville, VA 23111 - USA - Tel. +1 (804) 569-1000 - Fax: +1 (804) 559-8650 - Toll free 1-866-460-QAMF (7263)

EUROPEAN HEADQUARTERS

Via della Croce Coperta, 15 - 40128 Bologna - Italy - Tel.+39 (051) 4192-611 - Fax +39 (051) 4192-602

www.qubicaamf.com - info@qubicaamf.com